



CREATE HOME ICE ADVANTAGE

5743 Ferrier St
Mont-Royal, QC
H4P 1N3



BACKYARD RINK KIT QUICK START GUIDE



WHAT'S INCLUDED:

- BIG WHITE TUBES [1]
- SMALL WHITE TUBES [2]
- BLUE COPING STRIPS [3]
- BLUE COPING CORNERS [4]
- BLUE COPING C-CLIPS [5]
- RED SUPPORT BRACKETS [6]
- WHITE FOAM CORNERS [7]
- STYROFOAM SHEET (NOT SHOWN)
- LINER (NOT SHOWN)
- HOCKEY PUCKS (NOT SHOWN)
- LINER TAPE (NOT SHOWN)

RECOMMENDED TOOLS:

- UTILITY KNIFE
- SPIRIT LEVEL
- TAPE MEASURE
- RAKE
- WEIGHTS




HAVE A QUESTION?
CALL US 1-844-797-8305




FOR DETAILED INSTRUCTIONS
PLEASE VISIT WWW.ICENGO.COM

1

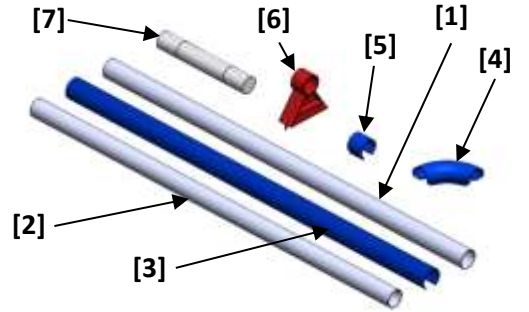

2

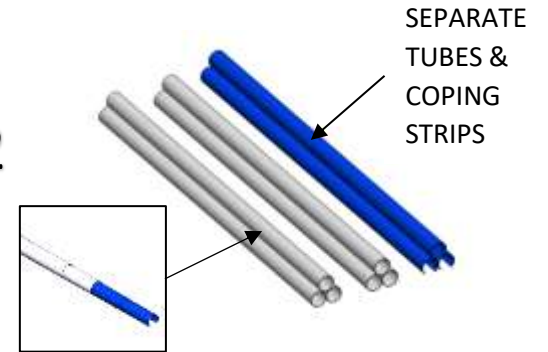


SEPARATE
TUBES &
COPING
STRIPS




PLEASE READ INSTRUCTIONS
CAREFULLY BEFORE STARTING


3

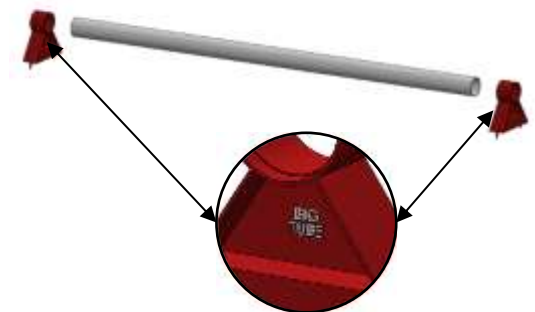


4

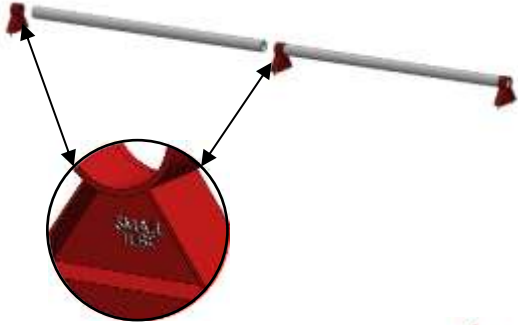


5

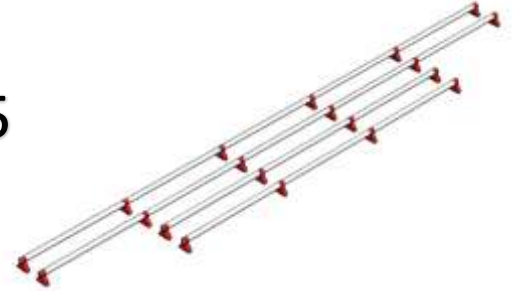

6

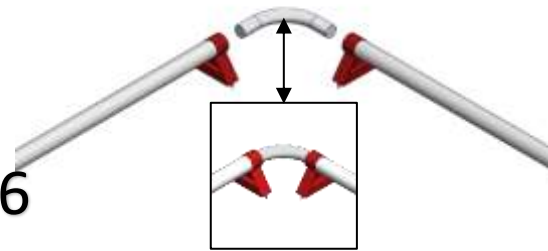

7

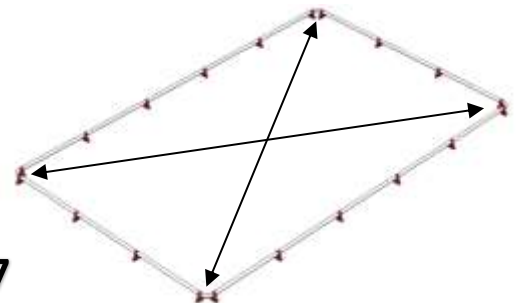

8




! MAX SLOPE OF 4 INCHES.
IF SLOPE IS GREATER THAN 4 INCHES
PLEASE CALL 1-844-797-8305

9




! INSTALL LINER IN CONDITIONS
WITH LITTLE OR NO WIND

10

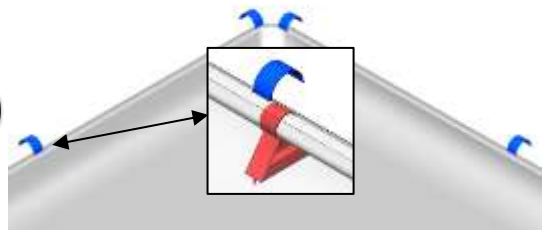


11

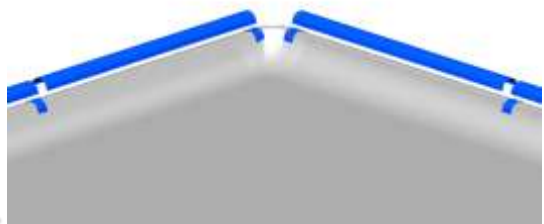


12



13

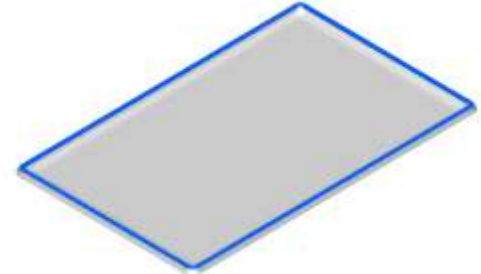

14

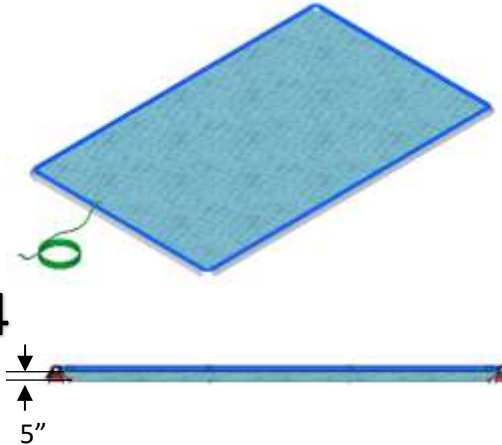

! MAX FILL HEIGHT OF 5 INCHES. IF
FILLING PAST 5 INCHES IS
NECESSARY, PLEASE CONTACT US
AT 1-844-797-8305