



CREATE HOME ICE ADVANTAGE

5743 Ferrier St
Mont-Royal, QC
H4P 1N3

EZ RINK 2.0

BACKYARD RINK KIT USER MANUAL



HAVE A QUESTION?

CALL US!

OUR CUSTOMER SERVICE ASSOCIATES ARE
READY TO ANSWER ANY QUESTIONS, CONCERNS
OR COMMENTS YOU MAY HAVE ABOUT YOUR
NEW ICE N'GO RINK KIT.

1-844-797-8305

MONDAY TO FRIDAY, 8 A.M. – 5 P.M.

VISIT OUR WEBSITE!

WWW.ICENGO.COM


WWW.ICENGO.CA

WE'D LOVE TO SEE YOUR FINISHED RINK!

SHARE IT WITH US!

 facebook.com/icengorink

 instagram.com/icengorink

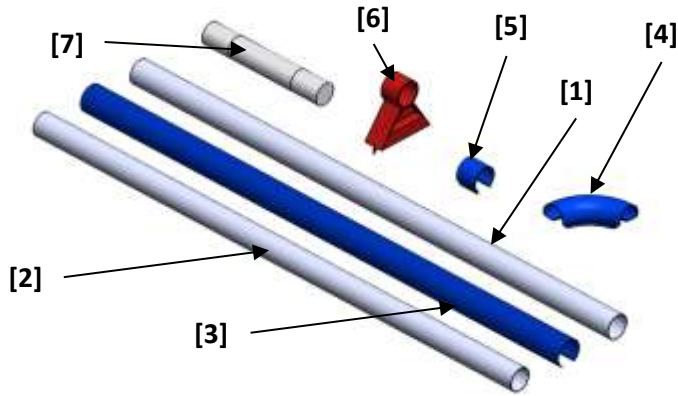


WHAT'S INCLUDED:

- BIG WHITE TUBES [1]
- SMALL WHITE TUBES [2]
- BLUE COPING STRIPS [3]
- BLUE COPING CORNERS [4]
- BLUE COPING C-CLIPS [5]
- RED SUPPORT BRACKETS [6]
- WHITE FOAM CORNERS [7]
- STYROFOAM (NOT SHOWN)
- LINER (NOT SHOWN)
- HOCKEY PUCKS (NOT SHOWN)
- LINER TAPE (NOT SHOWN)

RECOMMENDED TOOLS:

- UTILITY KNIFE
- SPIRIT LEVEL
- TAPE MEASURE
- RAKE
- WEIGHTS

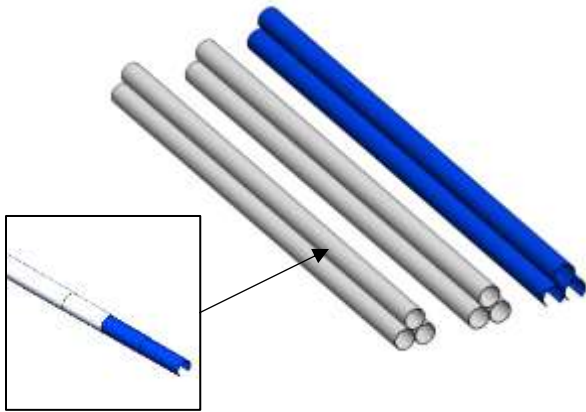

STEP 1:

- SEPERATE ALL TUBES AND COPING STRIPS. EVERYTHING MUST BE PULLED OUT OF THE LARGE TUBES AND SET APART.


STEP 2:


PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE STARTING.

- CHOOSE A LOCATION THAT IS RELATIVELY FLAT AND CLEAR IT OF DEBREE THAT MAY PUNCTURE YOUR LINER USING A RAKE (BRANCHES, ROCKS, PINECONES, ETC.)
- PROCEED TO LAYOUT ALL THE PARTS ACCORDING TO YOUR RINK SIZE AND MAKE SURE YOU HAVE ALL THE NECESSARY PARTS.
- IF ANYTHING IS MISSING OR YOU RECEIVED A WRONG LINER SIZE, PLEASE CALL 1-844-797-8305.

STEP 3:


- INSERT THE BIG TUBE INTO THE SIDE OF THE BRACKET MARKED "BIG TUBE".
- DO THIS FOR ALL THE BIG TUBES.

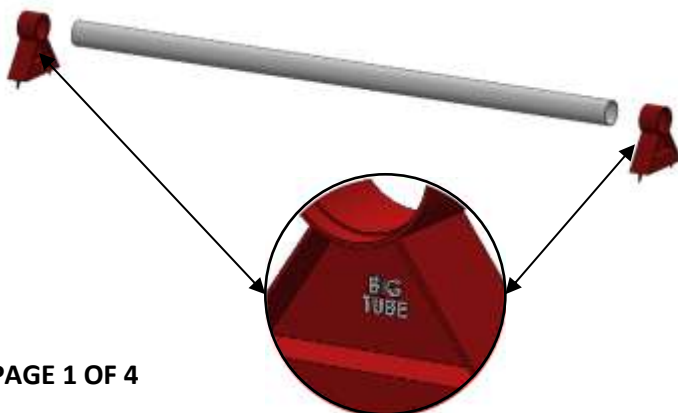

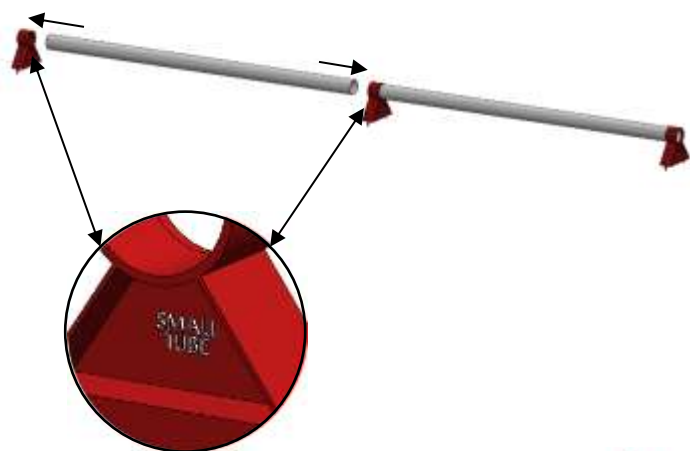

STEP 4:


- INSERT ALL THE SMALL TUBES INTO THE SIDE OF THE BRACKET MARKED "SMALL TUBE".
- DO THIS FOR ALL THE SMALL TUBES.

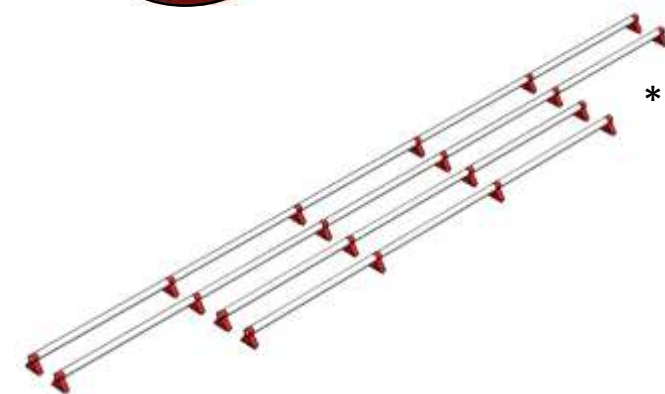

STEP 5:


- YOU SHOULD NOW HAVE FOUR COMPLETE SIDES.

* MODEL SHOWN IS FOR REFERENCE ONLY, SIZING WILL VARY DEPENDING ON THE KIT SIZE PURCHASED.

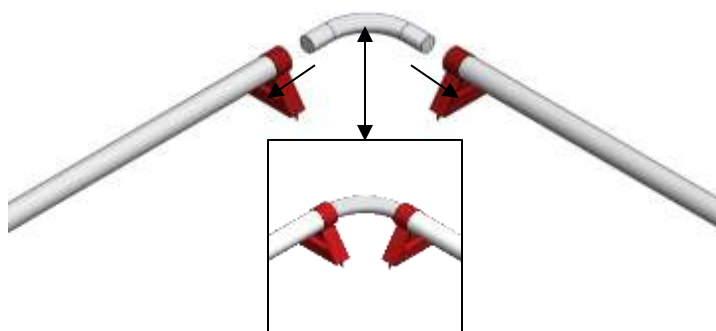

STEP 6:

- AT EACH CORNER INSERT A FLEXIBLE FOAM FITTING INTO EACH END.
- USE A TWISTING MOTION FOR BEST RESULTS.

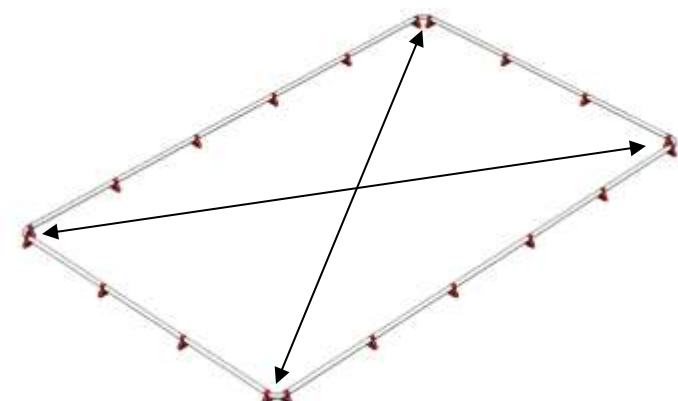


STEP 7:

- ENSURE THAT YOUR FRAME IS SQUARE BY MEASURING FROM CORNER TO CORNER. BOTH MEASUREMENTS SHOULD BE APPROX. THE SAME VALUE.
- PLEASE SEE THE CHART ON OUR WEBSITE FOR THE DIAGONAL MEASUREMENT FOR YOUR RINK SIZE.



MAX SLOPE OF 4 INCHES. IF SLOPE IS GREATER THAN 4 INCHES PLEASE CONTACT US AT 1-844-797-8305

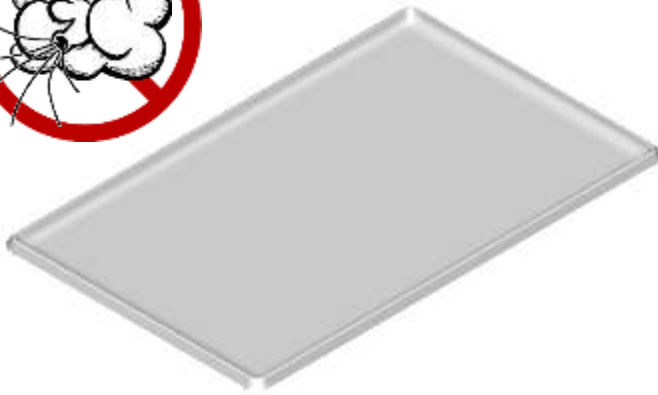

INSTALL LINER IN CONDITIONS WITH LITTLE OR NO WIND


STEP 8:

- USING THE INCLUDED FOAM AND A SPIRIT LEVEL (NOT INCLUDED), LEVEL OUT THE FRAME STARTING FROM THE HIGHEST POINT TOWARDS THE LOWEST POINT.
- ENSURE THAT THE GROUND SPIKES ARE FIRMLY PLANTED INTO THE FOAM OR INTO THE GROUND.
- PLEASE NOTE ADDITIONAL FOAM FOR LEVELING MAY NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE.


STEP 9:

- LAY OUT THE LINER AND ENSURE THAT IT OVERLAPS THE FRAME.
- USE WEIGHTS OR SNOW IN EACH CORNER TO HELP HOLD THE LINER.
- USE CAUTION TO AVOID DAMAGE TO THE LINER.

INSTALL LINER IN CONDITIONS WHERE THERE IS LITTLE OR NO WIND.

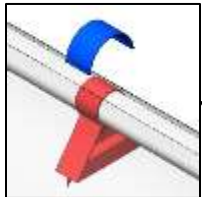

**

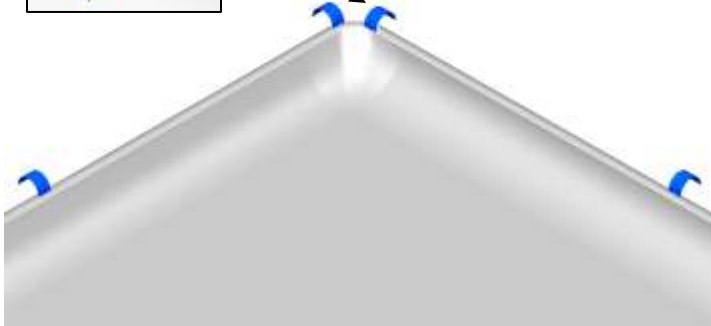

STEP 10:

- STRETCH THE BLUE COPING C-CLIPS OVER THE LINER AND OVER TOP OF THE RED BRACKET.

** LINER SHOWN TRANSPARENT FOR CLARITY.




STEP 11:

- STRETCH THE BLUE COPING STRIPS OVER THE LINER AND FRAME TO FASTEN THE LINER INTO PLACE.




STEP 12:

- INSTALL THE FOUR BLUE CORNER COPING PIECES.

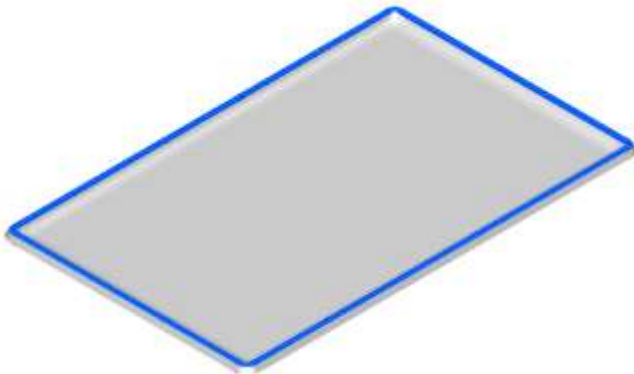

STEP 13:

- THE RINK STRUCTURE IS NOW COMPLETE.

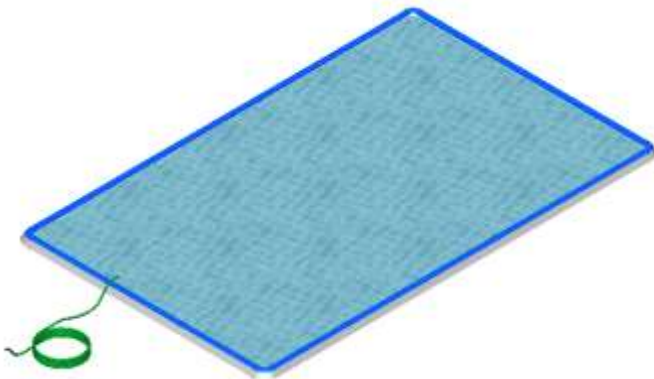

STEP 14:

- BEGIN FILLING YOUR RINK AS SOON AS IT IS COMPLETED.
- ENSURE THAT YOUR HOSE IS FACING THE GROUND AND NOT CREATING A CURRENT TOWARDS SIDES.
- FOR BEST RESULTS BUILD YOUR ICE IN 1 INCH INCREMENT LAYERS AND ALLOW ENOUGH TIME FOR THE ICE TO FREEZE BETWEEN LAYERS.
- PLEASE REFER TO THE FREEZING CHART ON OUR WEBSITE FOR MORE INFORMATION.

**MAX FILL HEIGHT OF 5 INCHES.
DO NOT LEAVE RUNNING WATER UNATTENDED**



**MAX FILL HEIGHT OF 5 INCHES. IF FILLING
PAST 5 INCHES IS NECESSARY, PLEASE
CONTACT US AT 1-844-797-8305**